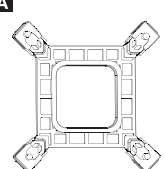 
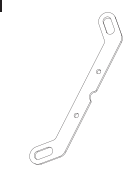 
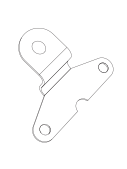 



 



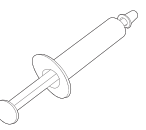 

 
 
 

 
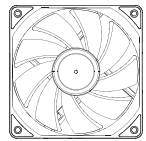 
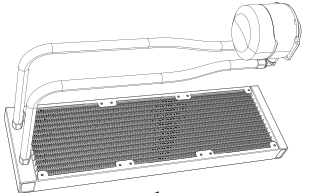 


VORTEX LUM 360

 
 
MANUAL

ACCESSORIES

 
 
A  Intel Backplate x1	B  Intel Backplate x2	C  AMD Backplate x2	D  Backplate x2
E  x4	F  x4	G  x4	H  x12
I  x4	J  x12	K  x1	L  x1
M  x1	N  x1	O  x4	P  AMD TR4 Backplate x2
Q  x4	R  x3	S  x1	

INTEL PLATFORM INSTALLATION

 
 
Intel 115X / 1200 / 1700 / 1851

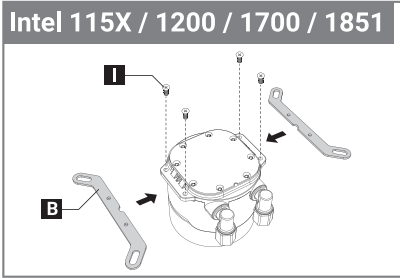 
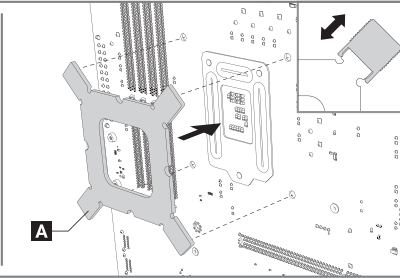 
Intel 115X / 1200

Intel 1700 / 1851

 
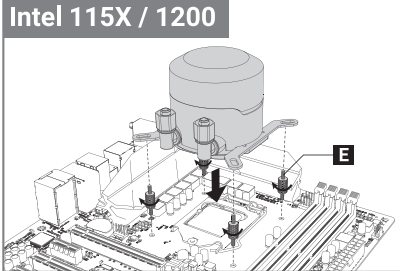 
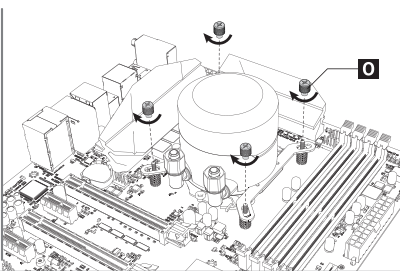 



Intel 20XX

 
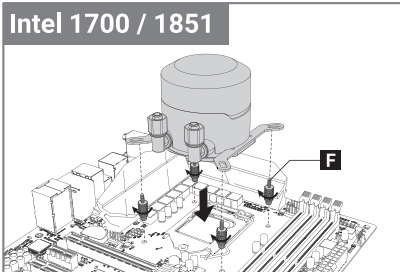 
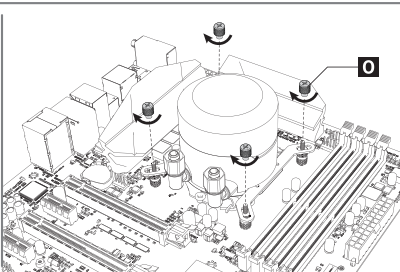 


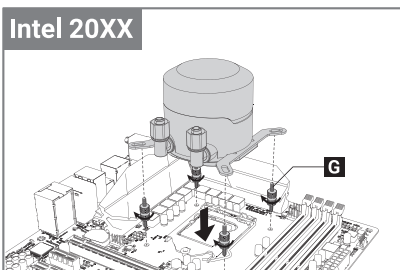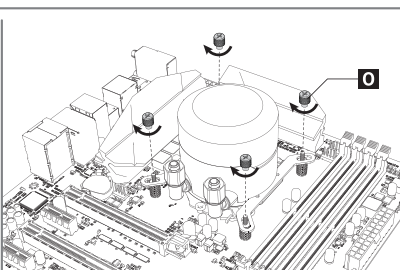
AMD PLATFORM INSTALLATION

 
 
AMD AM3 / AM4 / AM5

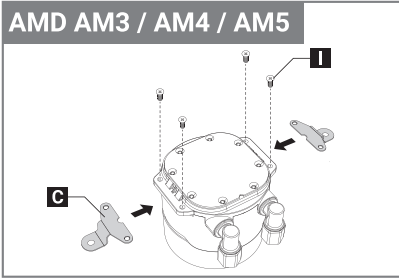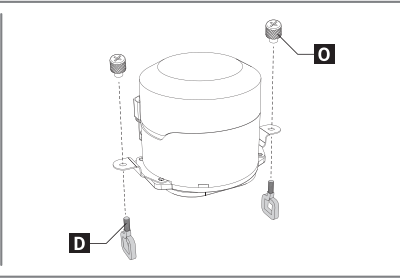 
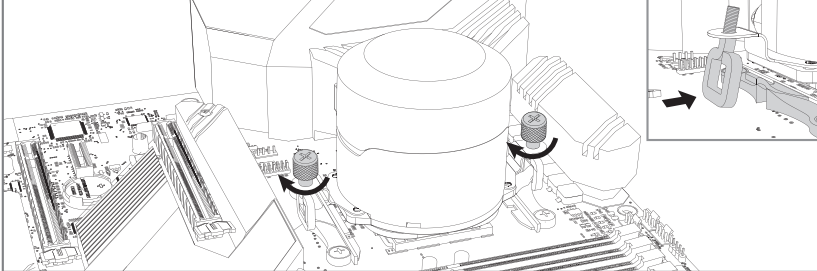 
AMD TR4

 
 
INSTALL THE PUMPHEAD & FAN

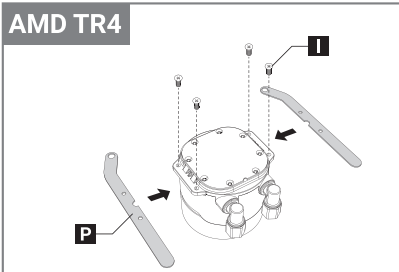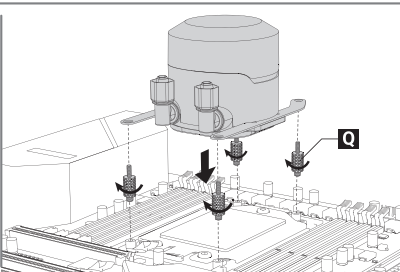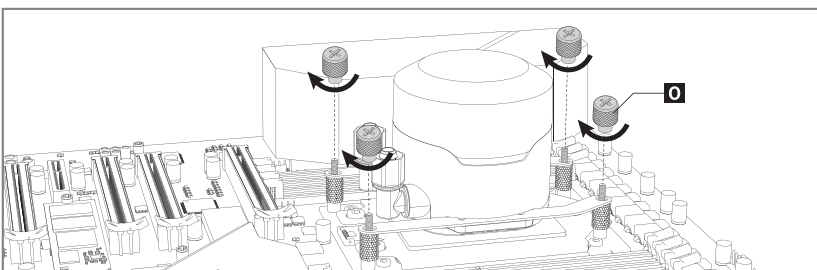

RADIATOR INSTALLATION

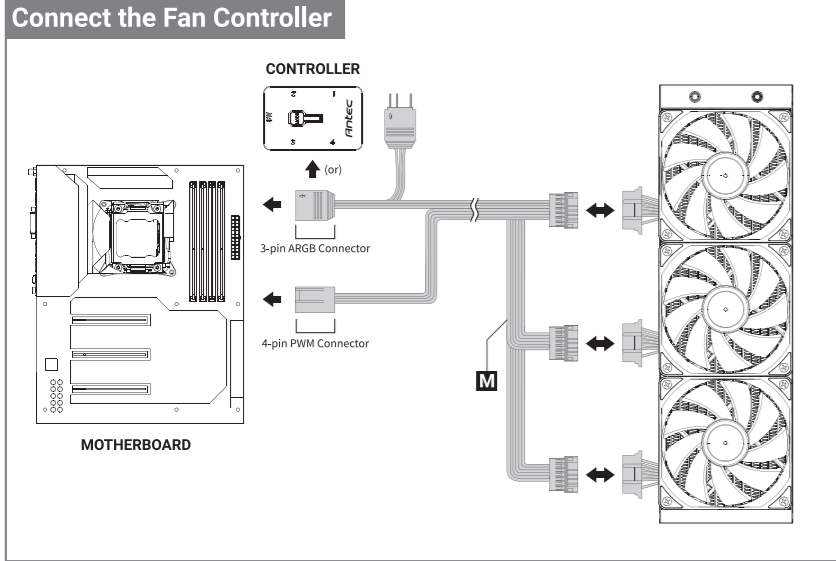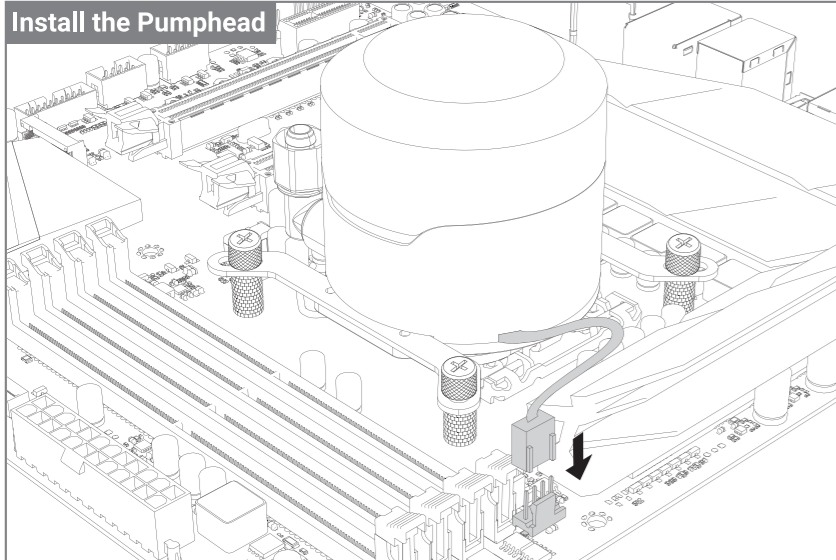

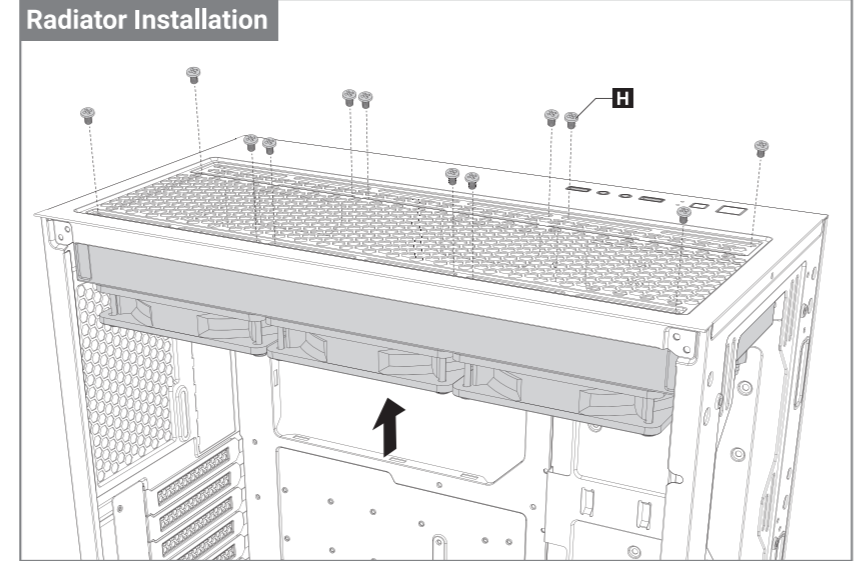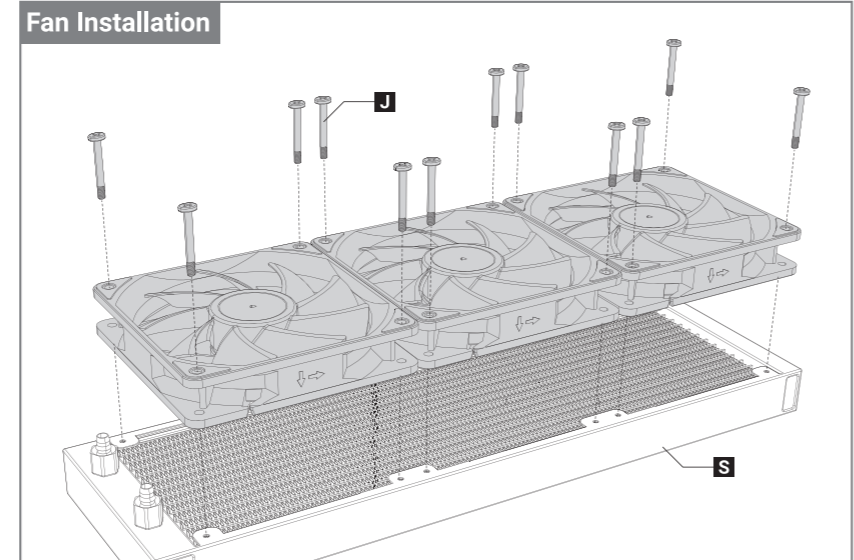CONTROLLER

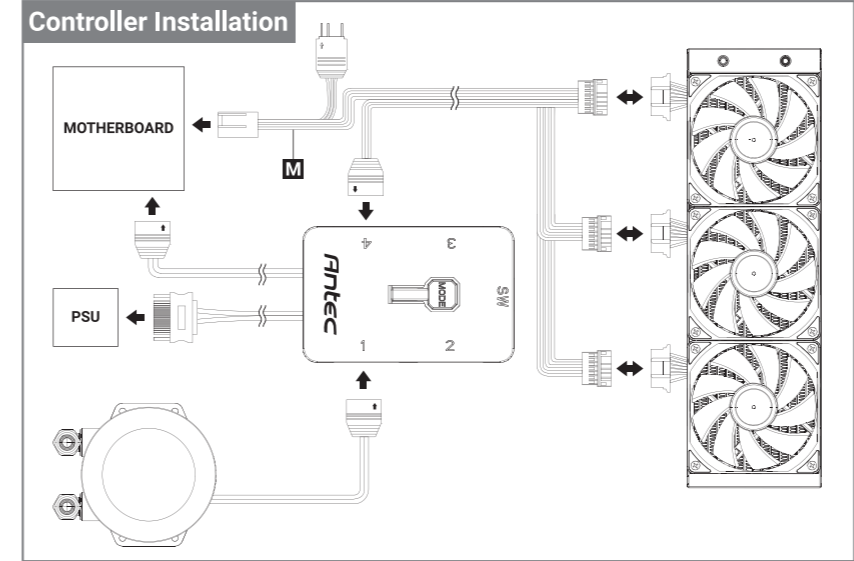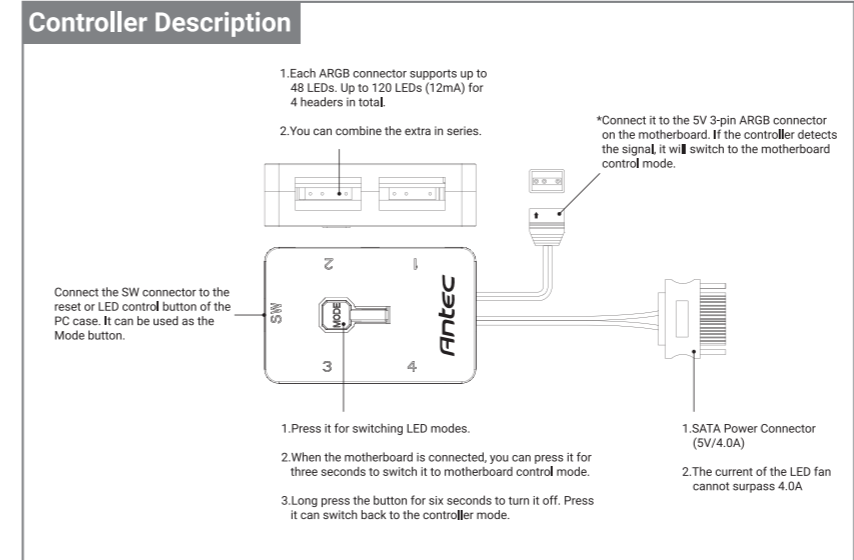

Antec

BELIEVE IT

www.Antec.com

All rights reserved. Specifications are subject to change without prior notice. Actual products and accessories may differ from illustrations. Omissions and printing errors excepted. Content of delivery might differ in different countries or areas. Some trademarks may be claimed as the property of others.