



HYPER VISION DISPLAY USER GUIDE

1. Check 9 pin USB cable connection between waterblock and motherboard before installing.
2. Download software at: <https://www.thermalright.com/support/download/> unzip setup file and start install by double click setup.
3. After install completed, double click shortcut icon on desktop to run software.
4. All functions on LCD are controlled by software, and software will auto start at OS boot. Please do not exit the program.
5. For unknown error, restart the display by re-plug USB cable on waterblock.

HYPER VISION 系列水冷液晶屏控制软件说明

1. 液晶屏的供电和数据通信传输均由主板6针USB接口提供。软件安装前请确认接线完整
2. 软件可在官网下载：<https://www.thermalright.com/support/download/>解压并双击安装程序安装
3. 桌面双击 软件快捷方式图标运行软件
4. 本液晶屏的实时数据监控/数据传输/开启/关闭等等功能均由软件控制。安装完成默认随电脑开机启动，并在任务栏常驻后台，请勿关闭/强制退出。
5. 如遇到未知不可控情况，可拔插冷头上Type-C接口进行硬件重启

